


High Pressure Pump, Assembly Overview

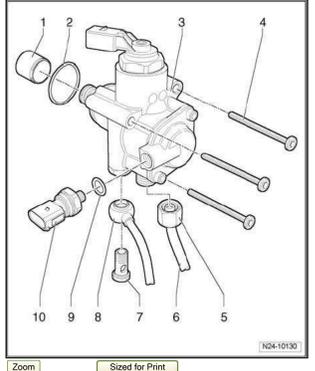

- 1 - Lifter
- 2 - O-ring
  - Replace
  - Lightly lubricate O-rings with clean engine oil before installing
- 3 - High pressure pump with Fuel Pressure Regulator Valve N276
- 4 - **10 Nm**
- 5 - Union nut
  - **25 Nm**
  - Install fuel line free of stress.
- 6 - High pressure line
  - Follow safety measures for releasing fuel pressure in high pressure area.
- 7 - Banjo bolt with conical seal seat
  - **17 Nm**
  - Replace
  - Install fuel line free of stress.
  - Counter hold on high pressure pump when loosening connection.
- 8 - Fuel line
  - Low pressure
- 9 - Seal
  - Replace
- 10 - Low Fuel Pressure Sensor G410
  - **15 Nm**